




Multi-Function Lighting Remote Control Kit

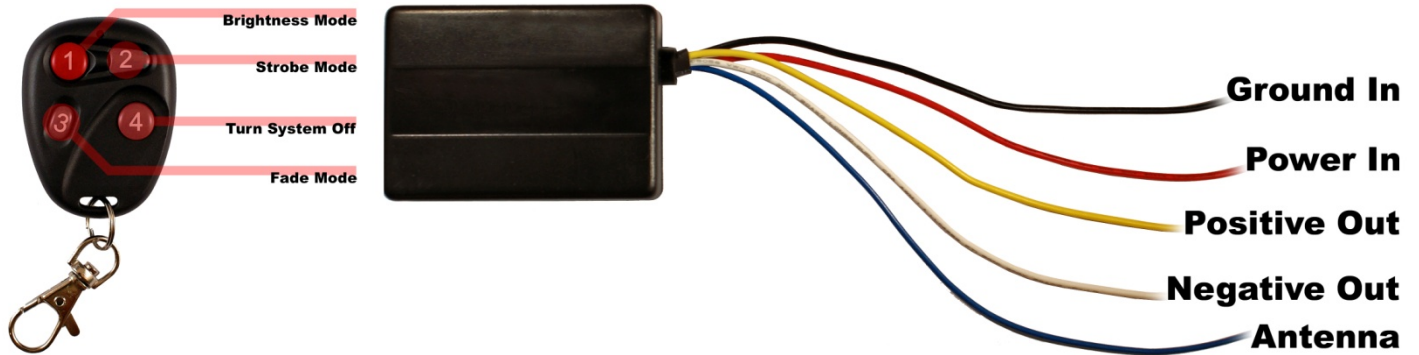

Installation:

Find a clean and dry location to mount the control unit. This remote control system is not waterproof, so assure that the control unit and the remote handset transmitter does not get wet. Attach the unit to the surface using double sided tape or plastic zip ties.

The **BLUE** color wire is the **ANTENNA** wire; it should not be connected to any other wire and also be positioned as high as possible to increase the remote control range.

The **BLACK** color wire is the **GROUND IN** wire; it should be connected to the power source ground.

The **RED** wire is the **POWER IN**; it should be connected to the 12 volt power source.

The **YELLOW** wire is the **POSITIVE OUT**; it should be connected to the positive (power) wire of the LED's that are being controlled.

The **WHITE** wire is the **NEGATIVE OUT**; it should be connected to the negative (ground) wire of the LED's that are being controlled.

Operation:

There are 4 buttons on the remote handset. Each button performs a separate function, they are as follows:

1. **Brightness Mode Control** (8 Levels – dim to bright)
2. **Strobe Mode Control** (6 Levels – 2 to 7 flashes per strobe)
3. **Fade Mode Control** (1 Level – Fade In / Fade Out)
4. **Turns System Off**

Press the 1, 2, or 3 button on the handset to activate the LED's you are controlling.

Press the 4 button to turn off the remote and the LED's.

Battery:

When the battery on the handset transmitter gets low, the operating range will decrease as well. Replace the battery to remedy.
Replacement battery type: 27A / 12V.